


I - Install the application Casambi

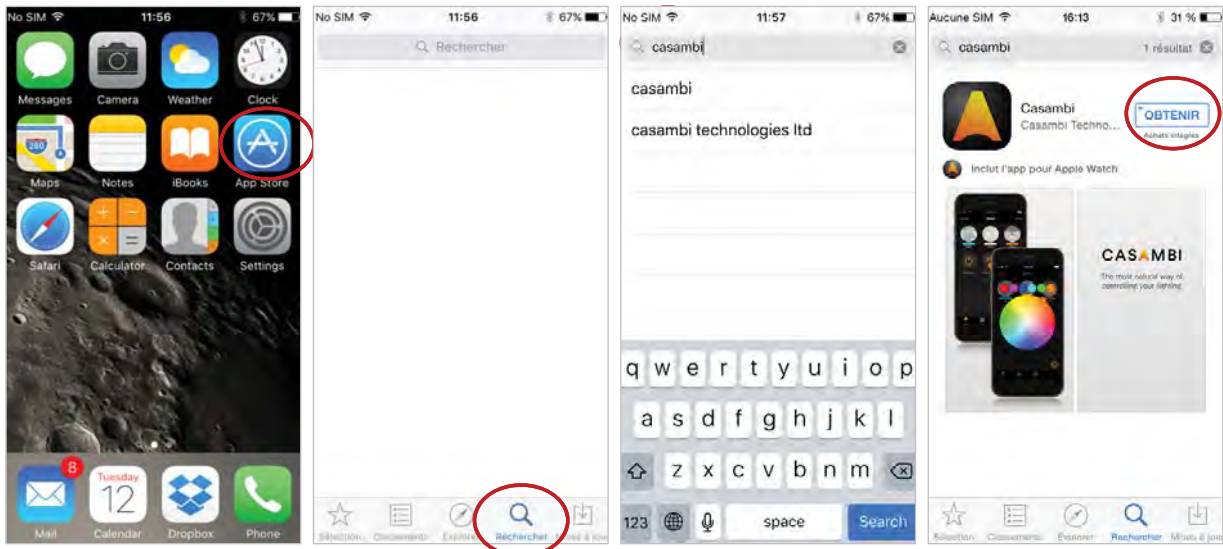

1. **Apple Store**
or
Google Play
2. « **search** »
3. **write in the search field:**
«**casambi**»
4. « **DOWNLOAD** »


Careful :
version IOS/Android up to date!

1

notice de programmation Albédo n8LED.R

v.2016-04

II- Initial Set-up (activate) (1/2)

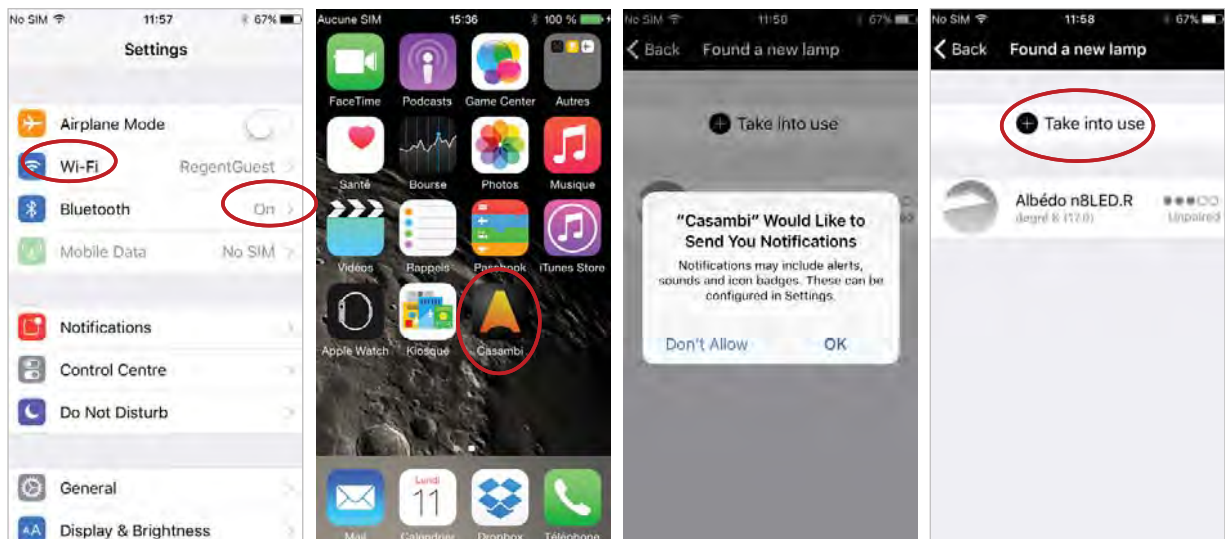


1. **WIFI (or 4G)**
+
Bluetooth
2. **Switch on Albédo n8LED.R**
+
Open Casambi appl.
3. **Don't allow or OK**
(no impact on the use)
4. The following screen will
appear if Albédo is powered
and switched on.
Press "Switch"

2

notice de programmation Albédo n8LED.R

II- Initial Set-up (activate) (2/2)

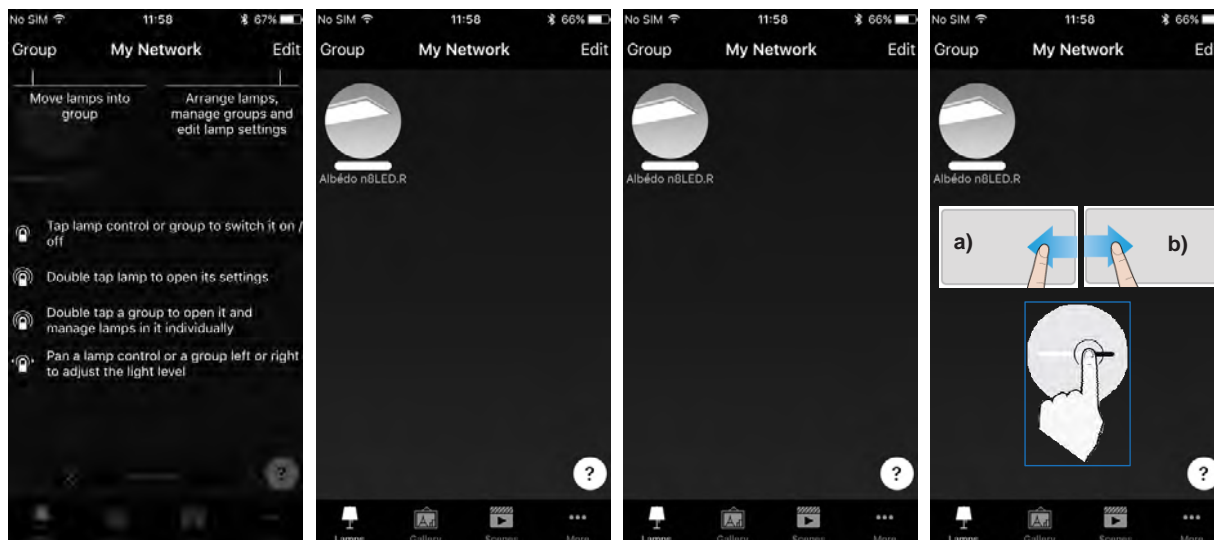


5. This screen appears: it indicates basis to control your Albédo.
next:
>> touch the screen

This screen appears: your Network and your Albédo are activated and ready to function.

Short touch on the picture = switch on or off the Albédo
Switch on is instantaneous / Switch off can take several seconds

Maintain the finger on the picture and move it:
a) Left = less intensity
b) Right = more intensity

III- Network configuration - Change the network name

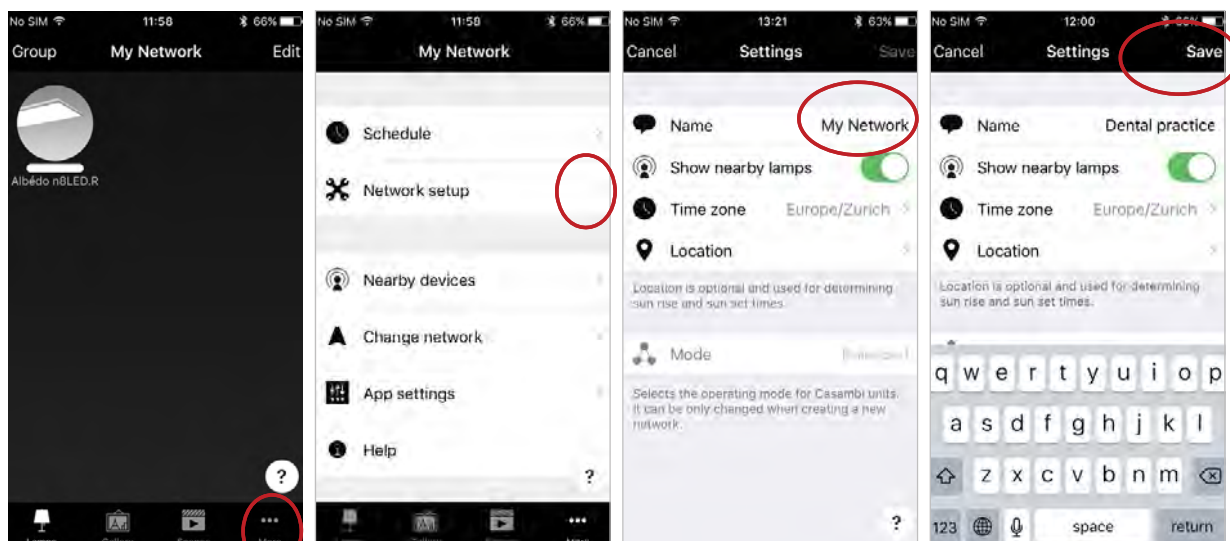

1. You can personalize your network.
Touch: « ... »
More

2. Touch:
« Network Setup »

3. Touch: « My Network »
>> keyboard appears




4. Write the name you'd like to give to your Network
+
Touch:
« Save »

IV- Network configuration - Recommended setting of Albédo n8LED.R



The factory setting of Albédo n8LED.R is set to 100% (= LUX +). We must save the "standard" setting. **We recommend 70%.**

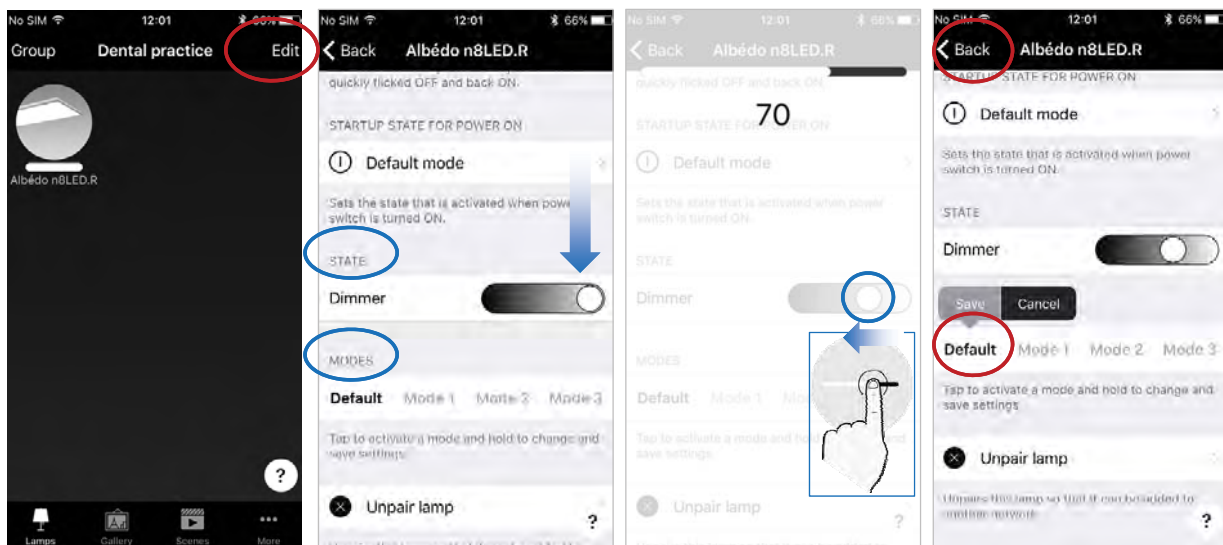

1. Recommended setting:
Touch: « Edit »

2. Slip >> make
« STATE » & « MODES »
appear


3. Touch cursor (white round)
of Dimmer:
slip left >> 70
(ideal value for the majority of
dental practices)

4. Touch/press:
« default »
>> « Save » appears
>> Touch « Save »
>> Touch « Back »

IV- Initial Set-up– Create personalized scenes (1/3)



Create the 2 scenes: « Standard » and « LUX+ », ... and any other desired setting... We will create the scene for a setting of 70% (standard) and the scene for a setting of 100% (LUX+)

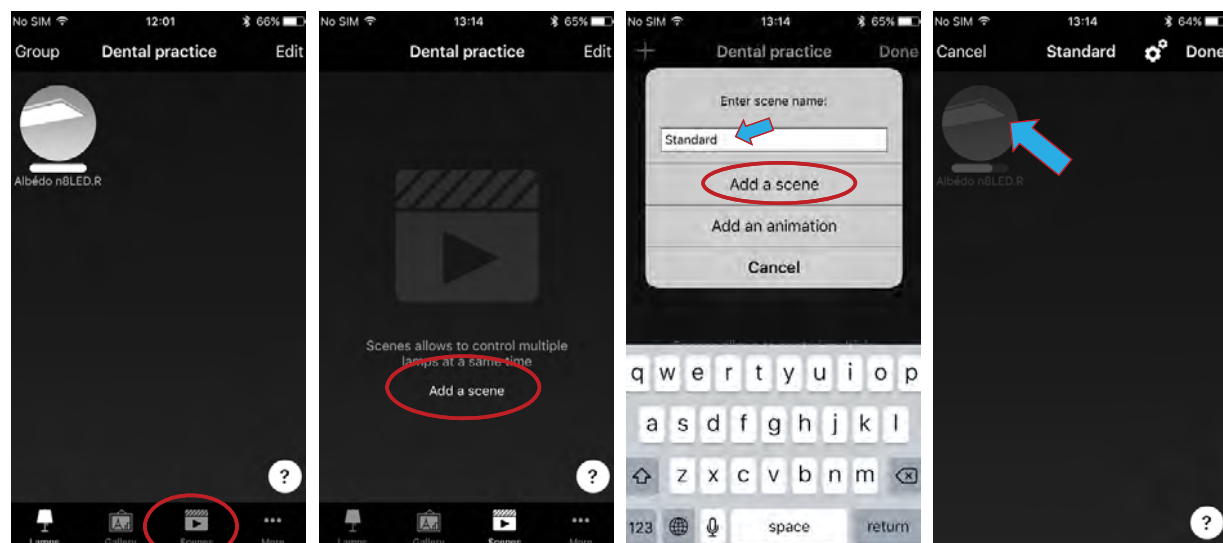


1. Touch: « Scenes »

2. Create the first scene >>
Touch:
« Add a scene »

3. Name the scene
« Standard »
+
Touch:
« Add a scene »

4. Select the lighting
>> Tap the picture.
>>
picture highlighted & symbol
« - » appears
(topleft of the image)

IV- Initial Set-up – Create personalized scenes (2/3)

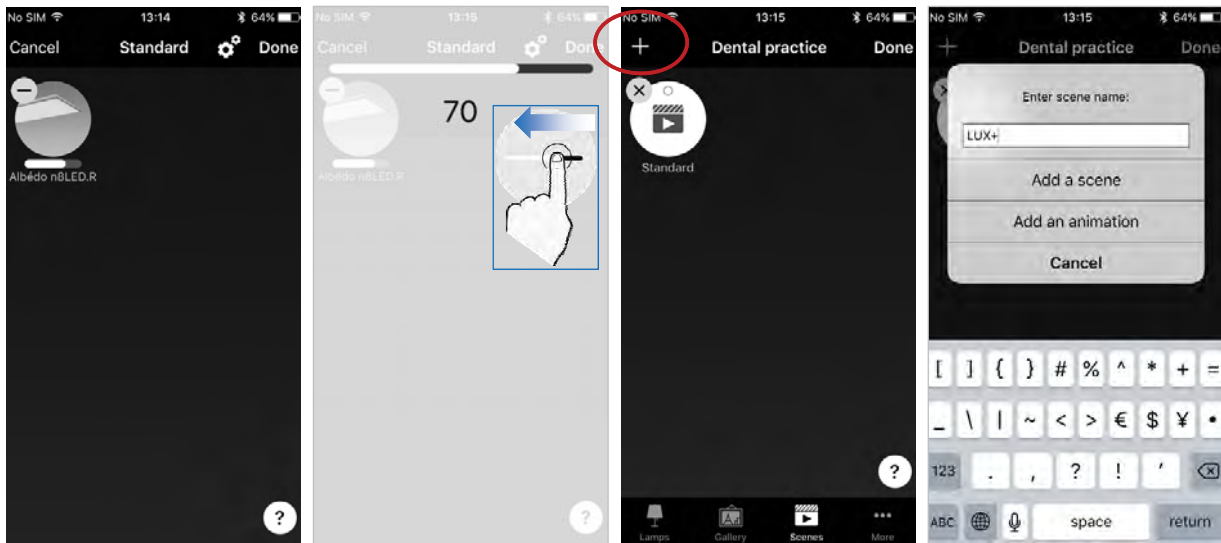

highlighted picture & symbol « - » appears (topleft of the image)

5. Touch the image and move your finger left to reach the value 70

6. When 70 value is reached, >> Release


+ Confirm: Tap "OK"

7. Tap « + » to add the 2d scene

8. Do the opérations 2 à 6. again with value = 100% (LUX+) + Confirm: Tap "OK"

IV- Initial Set-up – Create personalized scenes

(3/3)

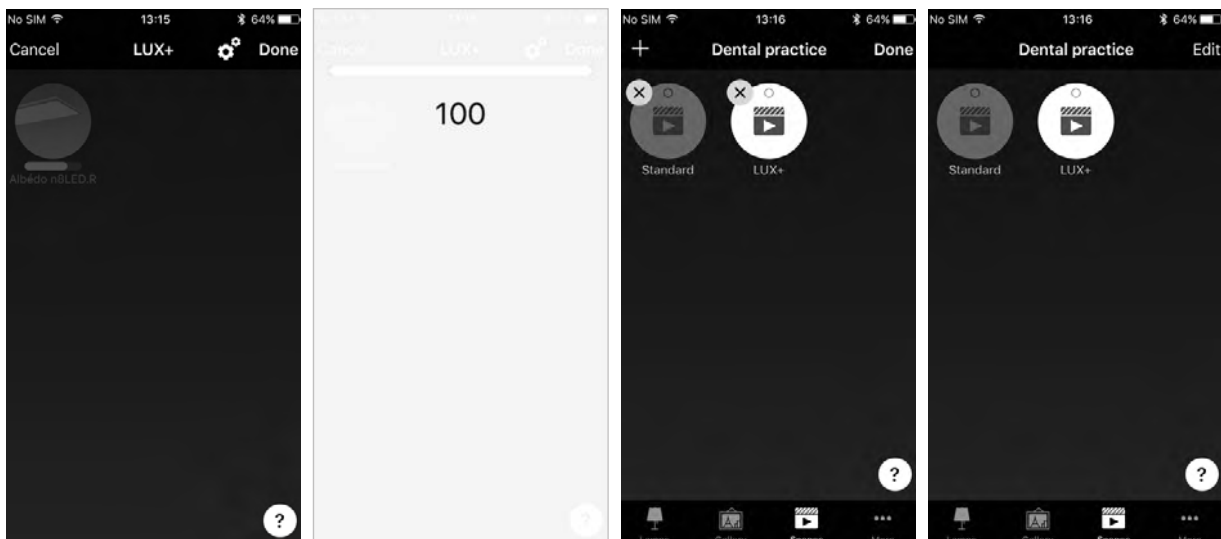

Setting = 100%

Confirm: Touch: « OK »

9. Complete the creation of your different scenes: Touch: « OK »

Your two scenes are now configured.

>> You can switch from one to another by pressing the selected scene.